

CHSV60 Chimney Hood



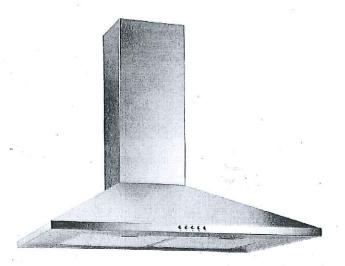



WF6 2AG

0900495_04 CHS





(/\)Information of the cooker Hood

	Symbol	Value	Unit
Model identification		CHSV60	
Annual Energy Consumption	AEChood	39.1	kWh/a
Time increase factor	f	1.6	
Fluid Dynamic Efficiency	FDE _{hood}	11.4	
Energy Efficiency Index	EEI _{hood}	76.1	
Measured air flow rate at best efficiency point	Q _{BEP}	182.5	m 3 /h
Measured air pressure at best efficiency point	P _{BEP}	132	Pa
Maximum air flow	Q _{max}	284.8	m 3 /h
Measured electric power input at best efficiency point	W _{BEP}	58.6	w
Nominal power of the lighting system	W _L	7.0	w
Average illumination of the lighting system on the cooking surface	E _{middle}	62	lux
Measured power consumption in standby mode	Ps		W
Measured power consumption off mode	Po	0	W
Sound power level	L _{WA}	Max. 73 / Min. 70	dB

The measurement and calculation method of the above table was done in accordance with commission regulation (EU) No 65/2014 & 66/2014.

(H) The following shows how to reduce total environmental impact (e.g. energy use) of the cooking process.

- (1) Install the cooker hood in a proper place where there is efficient ventilation.
- (2) Clean the cooker hood regularly so as not to block the airway.
- (3) Remember to switch off the cooker hood light after cooking.
- (4) Remember to switch off the cooker hood after cooking.

(C)Information for dismantling.

Do not dismantle the appliance in a way which is not shown in the user manual. The appliance could not be dismantled by user. At the end of life, the appliance should not be disposed of with household waste. Check with you Local Authority or retainer for recycling advice.

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Technical and legal information

Technical and legal information

The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

Power supply

220-240V~ 50Hz

Power consumption - Fan

Power consumption - Luminary :

1 x 7W Max

Power consumption - Total

: 87 W

Protection class

Light bulb


: Max. 7W (E-14)



All installation work must be carried out by a competent person or qualified electrician. Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood. Warning: THIS APPLIANCE MUST NOT

BE EARTHED.

Mains Supply could be connected to the Mains Voltage by Direct Connection

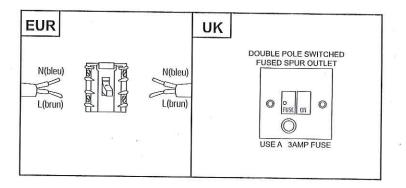

Direct Connection

If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.


The cable must be checked regularly and replaced by authorized technicians only.

Appendix...

Installation Information for EU66



01

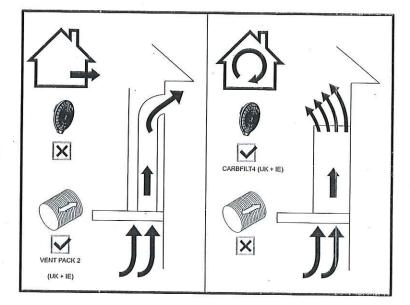

You can choose two type of installation:
- Extraction option
- Recirculation option

- We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- A steam cleaner is not to be used.
- The appliance is not intended to be operated by means of external timer or separated remote-control system.
- The appliance is for domestic use only.
- Warning: Consult local regulations regarding fumes outlets. Do not connect the hood to a fume, ventilation or hot air duct. Confirm that room ventilation is appropriate with the local authorities. Make sure the maximum air extraction flow rate for the appliances in the room does not exceed 4 Pa (0.04 mbar). The room must have adequate ventilation if an extractor hood is used simultaneously with appliances that run on gas or other fuels. The air must not be discharged into a flue that is used for exhausting fumes fromappliances burning gas or other fuels. Regulations regarding air extraction must be complied with.
- Warning: Before connecting the hood: switch off the electricity supply and check that the supplied voltage and frequency coincide with that indicated on the appliance nameplate.

- Warning: The hood may stop working during an electrostatic discharge (e.g. lightning). This involves no risk of damage. Switch off the electricity supply to the hood and reconnect after one minute.
- To avoid the risk of fire, clean the metal filter regularly and closely watch and regulate pans containing hot oil.
- Do not use the hood if it shows signs of damage or imperfection. Contact customer services.
- Flambe cooking must not be carried out underneath this appliance.
- When installing the appliance, make sure that the following distances between the top of cooker or hob and the lowest part of the cooker hood must be observed:
 - > Gas hobs: 750mm.
 - > Electric hobs: 650mm.
- The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.

⚠

Warning

There is a risk of electric shock and fire if cleaning is not carried out in accordance with the instructions.